MS32F303EFW

فـرن المـيـكـروويـف

إرشـادات ودليـل الـطهـي للمـالـك

يرجى العلم بأن ضمان Samsung لا يغطي اتصالات الخدمة الخاصة بشرح تشغيل المنتج أو تصحيح التركيب غير السليم أو تنفيذ عمليات الصيانة أو التنظيف العادية.

Planet First 100 % Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة ١٠٠ ٪.

إمكانات هائلة

نشكرك على شرائك هذا المنتج من Samsung.

SAMSUNG

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 1 2014-07-03 2:33:56

المحتويات

معلومات السلامة ٢

دليل البحث السريع ١١

ميزات الفرن ١٢

الفرن ١٢

لوحة التحكم ١٢

الأدوات الإضافية ١٣

استخدام الفرن ١٣

طريقة عمل فرن الميكروويف ١٣

التأكد من أن الفرن يعمل بشكل صحيح ١٤

ضبط الوقت ١٤

الطهي/التسخين ١٥

اختلاف مستويات الطاقة والوقت ١٥

ضبط مدة الطهي ١٥

إيقاف عملية الطهي ١٥

استخدام ميزة فك التجميد التلقائي ١٦

دليل الطهي بالبخار ١٦

استخدام وظيفة الإيقاف اليدوي للصينية الدوارة ١٨

دليل أواني الطهي ١٨

استكشاف المشكلات وحلها ٢٠

المواصفات الفنية ٢١

معلومات السلامة

استخدام كتيب الإرشادات

لقد حصلت الآن على فرن ميكروويف SAMSUNG. تتضمن إرشادات المالك معلومات قيمة تتعلق بالطهي باستخدام فرن الميكروويف:

- احتياطات السلامة
- الأدوات الإضافية وأدوات الطهي المناسبة
- تلميحات مفيدة للطهي
- تلميحات للطهي

قائمة بالرموز والشعارات المستخدمة

تحذير ممارسات عشوائية أو غير آمنة قد ينجم عنها حدوث **إصابات جسدية خطيرة أو الوفاة**.

تنبيه ممارسات عشوائية أو غير آمنة قد ينجم عنها **حدوث إصابات جسدية طفيفة أو إلحاق الضرر بالممتلكات**.

تحذير: خطر حريق

تحذير: سطح ساخن

تحذير: كهرباء

تحذير: مواد متفجرة

يحظر القيام بهذا الإجراء.

يحظر اللمس.

يحظر الفك.

اتّبع التعليمات بدقة.

افصل قابس التيار الكهربي من مأخذ الحائط.

تأكد من توصيل الجهاز بمصدر تيار أرضي لمنع حدوث صدمة كهربية.

اتصل بمركز الخدمة للحصول على المساعدة.

ملاحظة

هام

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 2 2014-07-03 2:33:56

إرشادات هامة تتعلق بالسلامة

اقرأ الإرشادات بعناية واحتفظ بها كمرجع في المستقبل.
تأكد من اتّباع احتياطات السلامة دائمًا.
قبل استخدام الميكروويف، تأكد من اتباع الإرشادات التالية.

⚠ تحذير (وظيفة ميكروويف فقط)
تحذير: في حالة تعرض الباب أو قفلي الباب للتلف، يجب عدم تشغيل الفرن حتى يتم إصلاح الفرن بواسطة شخص مؤهل.
تحذير: في حالة قيام شخص غير الشخص المؤهل بالصيانة أو عملية إصلاح يتم خلالها إزالة الغطاء الذي يقي من التعرض لأشعة الميكروويف فإنه بذلك يعرض نفسه للخطر.
هذا الجهاز مخصص للاستخدام المنزلي فقط.
تحذير: يجب عدم السماح للأطفال باستخدام الفرن دون مراقبة إلا بعد إعطائهم التعليمات المناسبة بحيث يتمكنون من استخدام الفرن بطريقة آمنة واستيعاب المخاطر التي قد يتعرضون لها نتيجة الاستخدام غير الصحيح.
تحذير: يُمكن استخدام هذا الجهاز من قِبل الأطفال البالغين من العمر ٨ سنوات أو أكثر أو الأشخاص الذين لديهم قدرات عقلية أو حسية أو جسدية ضعيفة أو من لديهم نقص في الخبرة أو المعرفة إذا تم إعطائهم إرشادات وتوصيات فيما يتعلق باستخدام الجهاز بطريقة آمنة وأصبحوا مُدركين لجميع المخاطر الموجودة. ينبغي على الأطفال عدم العبث بالجهاز. ينبغي عدم إجراء عمليات التنظيف وصيانة الجهاز التي يمكن للمستخدم القيام بها بواسطة الأطفال ممن يقل عمرهم عن ٨ سنوات وبدون الخضوع للإشراف.
استخدم الأواني المناسبة للاستخدام في أفران الميكروويف فقط.
عند تسخين الأطعمة في أواني بلاستيكية أو ورقية، احرص على مراقبة الفرن للتمكن من اتخاذ الإجراءات اللازمة تجنبًا لاشتعالها.
فرن الميكروويف مخصص لتسخين الأغذية والمشروبات. وقد يؤدي تجفيف الأغذية أو الأقمشة وتسخين ألواح التدفئة أو نعال البابوج أو قطع الإسفنج أو الأقمشة الرطبة أو المواد المشابهة لذلك إلى مخاطر الإصابة أو الاشتعال أو الحرائق.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 3 2014-07-03 2:33:57

في حالة تصاعد دخان، قم بإيقاف تشغيل الفرن أو فصله عن التيار الكهربي واجعل باب الفرن مغلقًا لإخماد أي اشتعال.	هذا الجهاز غير مخصص لاستخدامه بواسطة أشخاص يعانون من إعاقات جسدية أو حسية أو ذهنية (بما في ذلك الأطفال) أو ممن لديهم نقص في الخبرة والمعلومات إلا إذا خضعوا للإشراف أو تم تزويدهم بإرشادات تتعلق باستخدام الجهاز من قبل شخص مسئول عن سلامتهم.
تحذير: قد ينتج عن تسخين المشروبات باستخدام فرن الميكروويف حدوث فوران شديد عند غليانها لذا يجب توخي الحذر عند التعامل مع الحاوية.	يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
تحذير: يجب رج محتويات زجاجات الرضاعة وبرطمانات غذاء الأطفال أو تقليبها والتحقق من درجة حرارتها قبل استخدامها لتجنب حدوث أي حروق.	إذا تعرض سلك التيار الكهربي للتلف، فيجب استبداله بواسطة الشركة المصنّعة أو مسؤول الصيانة التابع لها أو أشخاص مؤهلين بنفس الكفاءة لتجنب التعرض للمخاطر.
يحظر سلق البيض ويحظر كذلك تسخين البيض المسلوق جيدًا دون تقشيره لأنه قد ينفجر حتى بعد انتهاء عملية التسخين بالميكروويف.	**تحذير:** لا يجب تسخين السوائل أو الأطعمة في حاويات مغلقة حتى لا تتعرض للانفجار؛
يجب تنظيف الفرن بشكل منتظم وإزالة أي بقايا للطعام.	يجب عدم تنظيف الجهاز باستخدام آلة نفاثة للمياه.
يُمكن أن يؤدي الإهمال في تنظيف الفرن إلى تدهور حالة سطحه مما قد يؤثر بشكل سلبي على الجهاز وقد ينتج عن ذلك خطورة عند الاستخدام.	يجب وضع هذه الفرن في الاتجاه والارتفاع الصحيحين بحيث يمكن الوصول إلى تجويف الفرن ومنطقة التحكم بها بسهولة.
هذا الجهاز غير مخصص للاستخدام داخل المركبات أو العربات المغطاة أو ما يشبهها.	يجب تشغيل الفرن مع الماء لمدة ١٠ دقائق قبل استخدامه لأول مرة.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 4 2014-07-03 2:33:57

★	إذا أصدر الفرن ضجة غريبة أو رائحة حريق أو دخان، افصل مأخذ الكهرباء على الفور واتصل بأقرب مركز خدمة.
★	يجب وضع الميكروويف بحيث يكون قريبًا من مأخذ التيار الكهربي بحيث يسهل توصيله.
⃠	ينبغي استخدام فرن الميكروويف أعلى المنضدة فقط وليس في خزانة.

⚠ تحذير (وظيفة الفرن فقط) - اختياري	
☛	**تحذير:** عند تشغيل الجهاز في "وضع الجمع"، يجب ألا يستخدم الأطفال الفرن إلا تحت إشراف أشخاص بالغين لحمايتهم من درجات الحرارة الناتجة.
★	يسخن الجهاز أثناء الاستخدام. يجب توخي الحذر لتجنب ملامسة أجزاء التسخين داخل الفرن.
⃠	**تحذير:** قد تسخن الأجزاء الظاهرة أثناء الاستخدام. يجب إبعاد الأطفال الصغار عن الفرن.
⃠	يجب عدم استخدام منظف يعمل بالبخار.
⃠	**تحذير:** تأكد من إيقاف تشغيل الجهاز قبل استبدال المصباح لتجنب التعرض لصدمة كهربية.
★	**تحذير:** يُصبح الجهاز والأجزاء التي يمكن الوصول إليها ساخنة أثناء الاستخدام. ومن ثمّ، يتعين عليك توخي الحذر لتجنّب لمس الأجزاء الساخنة. يجب الحفاظ على الأطفال أقل من ٨ سنوات بعيدًا عن المنتج إلا إذا كانوا مراقبين بصفة مستمرة.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 5 2014-07-03 2:33:57

قد تكون درجة حرارة الأسطح مرتفعة عندما يكون الجهاز قيد التشغيل.	
قد يصبح الباب أو السطح الخارجي ساخنًا عندما يكون الجهاز قيد التشغيل.	
يجب أن يكون الجهاز والسلك الخاص به بعيدًا عن متناول الأطفال ممن يقل عمرهم عن ٨ سنوات.	
يُمكن استخدام هذا الجهاز من قِبل الأطفال البالغين من العمر ٨ سنوات أو أكثر أو الأشخاص الذين لديهم قدرات عقلية أو حسية أو جسدية ضعيفة أو من لديهم نقص في الخبرة أو المعرفة إذا تم إعطائهم إرشادات وتوصيات فيما يتعلق باستخدام الجهاز بطريقة آمنة وأصبحوا مُدركين لجميع المخاطر الموجودة. ينبغي على الأطفال عدم العبث بالجهاز. لا يُمكن للأطفال إجراء التنظيف وصيانة الجهاز دون مراقبة.	
لا تستخدم منظفات كاشطة خشنة أو أدوات كشط معدنية حادة لتنظيف زجاج باب الفرن لأنها قد تؤدي إلى خدش السطح، مما قد يؤدي إلى كسر الزجاج.	
هذا الجهاز غير مخصص ليتم تشغيله بواسطة وسائل للتوقيت الخارجي أو نظام منفصل للتحكم عن بُعد.	

تركيب فرن الميكروويف

ضع الفرن على سطح أملس مسطح يرتفع عن الأرض بمقدار ٨٥ سم. يجب أن يكون السطح قويًا بدرجة تكفي لتحمل وزن الفرن بأمان.

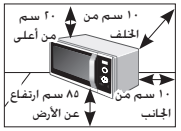

١. عند تركيب الفرن، تأكد من تهويته بشكل جيد بترك مسافة ١٠ سم (٤ بوصة) على الأقل من الخلف وعلى جانبي الفرن ومسافة ٢٠ سم (٨ بوصة) أعلاه.

٢. قم بإزالة كافة مواد التغليف الموجودة داخل الفرن.

٣. قم بتركيب الحلقة الدوارة والصينية الدوارة. تأكد من دوران الصينية الدوارة بحرية.
(الطراز المزوّد بالصينية الدوارة فقط)

٤. يجب وضع الميكروويف بحيث يكون قريبًا من مأخذ التيار الكهربي بحيث يسهل توصيله.

إذا تعرض سلك التيار الكهربي للتلف، يجب استبداله من قبل الشركة المصنّعة أو مسؤول الصيانة التابع لها أو أشخاص مؤهلين بنفس الكفاءة لتجنب التعرض للمخاطر. لسلامتك الشخصية، قم بتوصيل الكبل بمأخذ تيار متردد ذو طرف أرضي مناسب.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 6 2014-07-03 2:33:57

- يحظر تركيب فرن الميكروويف بجوار أشياء تنبعث منها حرارة أو رطوبة، على سبيل المثال، وضعه بجوار فرن تقليدي أو مدفئة. يجب الالتزام بالمواصفات الخاصة بمصدر الطاقة الخاص بالفرن. وأي كبل آخر يتم استخدامه يجب أن يكون بنفس مقاييس كبل الطاقة الذي يتم توفيره مع الفرن.
امسح الجدران الداخلية وقفل الباب بقطعة قماش مبللة قبل استخدام فرن الميكروويف للمرة الأولى.

تنظيف فرن الميكروويف

يجب تنظيف الأجزاء التالية من فرن الميكروويف على فترات منتظمة لمنع تراكم الدهون وبقايا الطعام:

- الأسطح الداخلية والخارجية
- الباب وقفلي الباب
- الصينية الدوارة والحلقة الدوارة
(الطراز المزوّد بالصينية الدوارة فقط)

- تأكد «**دومًا**» من نظافة قفلي الباب ومن إغلاق الباب بإحكام.

- يُمكن أن يؤدي الإهمال في تنظيف الفرن إلى تدهور حالة سطحه مما قد يؤثر بشكل سلبي على الجهاز وقد ينتج عن ذلك خطورة عند الاستخدام.

١. قم بتنظيف السطح الخارجي بقطعة قماش ناعمة وماء دافئ وصابون. اغسله بالماء ثم جففه.

٢. قم بإزالة أي بقع موجودة على الأسطح الداخلية للفرن بقطعة قماش مبللة بالصابون. اغسلها بالماء ثم جففها.

٣. لإزالة بقايا الطعام والروائح، ضع كوب به عصير ليمون مخفف في الفرن وقم بالتسخين لمدة عشر دقائق باستخدام أعلى مستوى للطاقة.

٤. اغسل الطبق المسموح باستخدامه مع غسالة الأطباق في أي وقت تحتاج لذلك.

- **يحظر** سكب الماء في الفتحات. **يحظر** استخدام أي مواد كاشطة أو مذيبات كيماوية. كن حريصاً جداً عند تنظيف قفلي الباب لضمان عدم وجود أي بقايا:
  - متراكمة
  - تمنع إغلاق الباب بشكل صحيح

- **نظّف** تجويف فرن الميكروويف بعد كل مرة تستخدمه فيها بمحلول تنظيف، ولكن اترك فرن الميكروويف فترة كافية ليبرد قبل التنظيف لتجنب حدوث أي إصابة.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 7 2014-07-03 2:33:57

عند تنظيف الجزء العلوي داخل التجويف، من الأفضل لف جزء التسخين حوالي ٤٥ درجة وتنظيفه.
(طراز السخان المروحي فقط)



تخزين فرن الميكروويف وإصلاحه

يجب مراعاة بعض الاحتياطات البسيطة عند تخزين فرن الميكروويف أو صيانته.
يجب عدم استخدام الفرن في حالة تعطل الباب أو تلف أقفاله:

- كسر إحدى مفصلاته
- تدهور حالة الأقفال
- تدهور حالة الجسم الخارجي للفرن أو تعرضه للانثناءات

يجب أن تتم صيانة عيوب الميكروويف بواسطة فني صيانة مؤهل

يحظر إزالة الجسم الخارجي للفرن. في حالة حدوث أعطال في الفرن والحاجة إلى صيانته أو إذا كنت تشك في سلامة حالته:

- افصله من مقبس الكهرباء بالحائط
- اتصل بأقرب مركز خدمة لما بعد البيع

إذا أردت تخزين الفرن الخاص بك بشكل مؤقت، اختر مكانًا جافًا وخالي من الأتربة.
السبب: قد تؤثر الأتربة والرطوبة بشكل سلبي على أجزاء الفرن.

لم يُصنع فرن الميكروويف للاستخدام التجاري.

يجب ألا تقوم باستبدال مصباح الإضاءة بنفسك لأغراض السلامة.
الرجاء الاتصال بأقرب مركز خدمة عملاء Samsung معتمد للاستعانة بمهندس مؤهل لاستبدال المصباح.

تحذير				
يقتصر تعديل فرن الميكروويف أو إصلاحه على فريق العمل المؤهل.	✓	✓	✓	✓
لا تسخن السوائل أو الأطعمة الأخرى في أواني مغلقة عند استخدام وظيفة الميكروويف.	✓	✓	✓	✓
يجب عدم استخدام منظفات مائية عالية الضغط أو منظفات نفث البخار للحفاظ على سلامتك.	✓	✓	✓	✓
لا تقم بتركيب الجهاز: بالقرب من السخان أو مواد قابلة للاشتعال؛ أو في مكان رطب أو ملوث بالزيت أو مليء بالأتربة، أو في مكان مُعرض لأشعة الشمس المباشرة والماء أو في مكان قد يتسرب فيه الغاز؛ أو على أرضية غير مستوية.	✓	✓	✓	✓
يجب تثبيت هذا الجهاز على الأرض بشكل سليم وفقًا للمعايير المحلية والدولية.	✓	✓	✓	✓

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 8 2014-07-03 2:33:58

قم بإزالة جميع المواد الغريبة كالأتربة أو الماء من أطراف قابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بصفة دورية.	✓	✓	✓	✓
لا تقم بسحب سلك التيار الكهربي أو ثنيه بشكل مفرط أو تضع أشياء ثقيلة عليه.	✓	✓	✓	✓
عند تسرب الغاز (مثل غاز البروبان أو الغاز النفطي المسال أو غيره من الغازات)، قم بالتهوية فورًا دون لمس قابس التيار الكهربي.	✓	✓	✓	✓
لا تلمس قابس التيار الكهربي بأيدٍ مبتلة.	✓	✓	✓	✓
لا توقف تشغيل الجهاز عن طريق فصل قابس التيار الكهربي عندما يكون قيد التشغيل.	✓	✓	✓	✓
لا تُدخل أصابعك أو أي مواد غريبة إلى الفرن. وفي حالة دخول أي مواد غريبة إلى الفرن (مثل الماء)، افصل مأخذ الكهرباء واتصل بأقرب مركز خدمة.	✓	✓	✓	✓
جَنّب تعريض الجهاز لضغط مفرط.	✓	✓	✓	✓
لا تضع الجهاز فوق سطح قابل للكسر، مثل حوض الماء أو سطح زجاجي.	✓	✓		
لا تستخدم البنزين أو التِنر أو منظفات البخار أو المنظفات ذات الضغط العالي لتنظيف الجهاز.	✓	✓	✓	✓
تأكد من تطابق مستوى فولطية الكهرباء والتردد والتيار الكهربي لديك مع مواصفات المنتج.	✓	✓		✓
قم بتوصيل قابس التيار الكهربي بمأخذ الحائط بإحكام. لا تستخدم محوّل كهرباء متعدد المقابس أو سلكًا إضافيًا أو محوّل كهرباء.	✓	✓	✓	

لا تعلق سلك الكهرباء على شيء معدني أو تُدخله بين أي أشياء أو تضعه وراء الفرن.	✓	✓	✓	
ولا تستخدم مقبس كهرباء أو سلك كهرباء تالف أو مأخذ حائط مفكوك. عند تلف قابس أو سلك الكهرباء، اتصل بأقرب مركز خدمة.	✓	✓	✓	✓
لا تصُب ماءً أو ترشه مباشرة داخل الفرن.	✓	✓		
لا تضع أي أشياء على الفرن أو داخله أو على باب الفرن.	✓	✓	✓	
لا ترش مواد متطايرة، مثل المبيدات الحشرية على سطح الفرن.	✓	✓		
لا تخزّن أي مواد قابلة للاشتعال داخل الفرن. توخ الحذر عند تسخين أطباق أو مشروبات تحتوي على الكحول؛ حيث إن أبخرة الكحول قد تلمس جزءًا ساخنًا بالفرن.	✓		✓	✓
يجب إبعاد الأطفال عن الباب عند فتحه أو غلقه لأنهم ربما يحشرون أنفسهم عند الباب أو ربما تُحشر أصابعهم داخل الباب.	✓	✓	✓	✓
تحذير: قد ينتج عن تسخين المشروبات باستخدام فرن الميكروويف حدوث فوران شديد عند غليانها، لذا يجب توخي الحذر عند التعامل مع الأواني؛ لمنع حدوث مثل هذا الموقف، انتظر "دومًا" لمدة تبلغ ٢٠ ثانية على الأقل بعد إيقاف تشغيل الفرن للسماح بمعادلة درجة الحرارة. قم بالتقليب أثناء التسخين إذا لزم الأمر والتقليب "دومًا" بعد التسخين. في حالة تعرضك للإصابة بالحروق، اتبع إرشادات "الإسعافات الأولية" التالية: • اغمر الجزء الذي تعرض للحرق بالماء البارد لمدة ١٠ دقائق على الأقل. • قم بتغطية مكان الحرق بقطعة جافة ونظيفة من الشاش الطبي. • لا تضع دهان كريم أو زبدًا أو غسولاً على الحرق.	✓	✓	✓	✓

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 9 2014-07-03 2:33:59

لا تضع الصينية أو الرف في الماء بعد الطهي بفترة قصيرة؛ فقد يؤدي ذلك إلى كسر الصينية أو الرف أو تلفه.				✓
لا تشغل فرن الميكروويف لقلي الأطعمة التي تحتوي على دهون عالية، وذلك بسبب عدم القدرة على التحكم في درجة حرارة الزيت. قد يؤدي ذلك إلى فوران السائل الساخن.	✓			✓

تنبيه				
استخدم الأواني المناسبة للاستخدام في أفران الميكروويف "فقط"؛ و"لا" تستخدم الأواني المعدنية أو أدوات المائدة ذات الزخارف الذهبية أو الفضية أو الماسكات المعدنية والشوك، وغيرها من الأدوات. قم بإزالة الأربطة السلكية من الأكياس الورقية والبلاستيكية. السبب: قد يحدث ماس كهربائي أو شرارة تؤدي إلى تلف الفرن.	✓		✓	✓
لا تستخدم فرن الميكروويف لتجفيف الأوراق أو الملابس.	✓		✓	✓
حدد مدد تسخين قصيرة لمقادير الطعام القليلة؛ وذلك لتجنّب التسخين الزائد أو تعرّض الطعام للاحتراق.	✓		✓	✓
لا تضع كبل الطاقة أو المقبس في الماء، واحرص على إبعاد كبل الطاقة عن الأسطح الساخنة.	✓	✓		
يحظر سلق البيض ويحظر كذلك تسخين البيض المسلوق جيدًا دون تقشيره لأنه قد يتفتق حتى بعد انتهاء عملية التسخين بالميكروويف؛ كذلك لا يجب تسخين الزجاجات والبرطمانات والأواني التي تم تفريغها من الهواء والمغلقة بإحكام والبندق غير المقشر والطماطم، إلخ.			✓	✓
لا تقم بتغطية فتحات التهوية سواء بقطع من القماش أو الورق؛ إذ قد تشتعل النيران في القماش أو الورق عند تفريغ الهواء الساخن من الفرن. كما قد ترتفع درجة حرارة الفرن بشكل زائد وتتوقف عن العمل تلقائيًا حتى تبرد بشكل كافٍ.	✓		✓	
استخدم دومًا قفازات عند إخراج طبق من الفرن لتجنب الإصابة بحروق غير متوقعة.			✓	
حرّك السوائل بشكلٍ جزئي أثناء عملية التسخين أو بعد انتهائها، مع ترك السوائل دون تقليب لمدّة ٢٠ ثانية بعد التسخين مباشرة لتجنّب الغليان المفاجئ.			✓	
قف بعيدًا عن الفرن بمقدار طول ذراعك عند فتح باب الفرن لتجنّب التعرّض لحروق من جرّاء الهواء الساخن المندفع منها.			✓	
لا تقم بتشغيل فرن الميكروويف عندما يكون فارغًا. وعند حدوث ذلك، سيتم إيقاف تشغيل فرن الميكروويف لمدة ٣٠ دقيقة للحفاظ على سلامتك. ومن ثمَّ، فإننا نوصي بوضع كوب ماء داخل الفرن بشكل دائم لامتصاص طاقة الميكروويف في حالة تشغيل الفرن بشكل غير مقصود.			✓	✓
ركّب الفرن وفقًا للمسافات المذكورة في هذا الدليل. (راجع "تركيب فرن الميكروويف".)			✓	✓
يجب توخي الحذر عند توصيل أي أجهزة كهربائية بالمقابس القريبة من الفرن.		✓	✓	✓

احتياطات لتجنب التعرض المحتمل لقدر كبير من طاقة الميكروويف.
(وظيفة الميكروويف فقط)

قد يؤدي عدم الالتزام باحتياطات السلامة التالية إلى التعرض لأشعة الميكروويف الضارة.

(أ) يجب عدم تشغيل الفرن تحت أي ظرف من الظروف عندما يكون باب الفرن مفتوحًا أو العبث بقفلي الأمان (قفلي الباب) أو وضع أي شيء في فتحتي قفلي الأمان.

(ب) لا تضع أي شيء بين باب الفرن والسطح الأمامي ولا تسمح بتراكم فضلات الطعام أو المنظّف على أسطح إحكام الإغلاق. وتأكد من نظافة الباب وأسطح إحكام الإغلاق بواسطة مسحها بعد الاستعمال باستخدام قطعة قماش مبلّلة ثم قطعة قماش جافة ناعمة.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 10 2014-07-03 2:34:00

دليل البحث السريع

أريد طهي بعض الطعام.



١. ضع الطعام داخل الفرن.
حدد مستوى الطاقة عن طريق لف قرص **التحكم في درجة حرارة الطهي**.

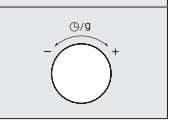

٢. حدد مدة الطهي عن طريق لف قرص **الوقت/الوزن**.
النتيجة: يبدأ الطهي بعد حوالي ثانيتين.

إذا أردت إذابة تجميد بعض الطعام أوتوماتيكيًا.



١. قم بلف قرص **التحكم في درجة حرارة الطهي** إلى رمز **Defrost (إذابة الثلج)**.

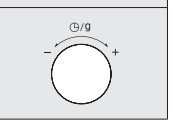

٢. قم بلف قرص **الوقت/الوزن** لتحديد الوزن المناسب.
النتيجة: يبدأ الطهي بعد حوالي ثانيتين.

إذا كنت ترغب في تعيين مدة الطهي.



ضع الطعام داخل الفرن.
وقم بلف قرص **الوقت/الوزن** إلى الوقت المطلوب.

(ج) لا تقم بتشغيل الميكروويف في حالة وجود تلف به حتى يتم إصلاحه بواسطة فني صيانة أجهزة ميكروويف مؤهَّل ومدرَّب لدى الشركة المصنعة. ويجب إغلاق الباب بإحكام والتأكد من عدم وجود تلف في:
(١) الباب (تعرّضه للثني)
(٢) مفصلات الباب (مكسورة أو غير مربوطة بإحكام)
(٣) قفلا الباب وأسطح إحكام الإغلاق

(د) يجب عدم ضبط الفرن أو إصلاحه من قبل أي شخص آخر غير فني صيانة أجهزة ميكروويف مؤهَّل ومدرَّب لدى الشركة المصنِّعة.

ستقوم Samsung بفرض رسوم مقابل استبدال أيّ أجزاء ملحقة أو إصلاح أيّ عيب تجميلي في حالة تلف الوحدة و/أو تلف الأجزاء الملحقة أو فقدها بسبب العميل. العناصر التي يغطيها هذا الشرط:

(أ) وجود نتوء أو كشط أو كسر في الباب أو المقبض أو اللوحة الخارجية أو لوحة التحكم.

(ب) كسر في صينية الفرن أو موجهة الدوران أو أداة التدوير أو الحامل السلكي أو فقد أي منهم.

- استخدم هذا الجهاز للغرض المخصص له فقط كما هو مذكور في دليل الإرشادات. لا تغطي التحذيرات وإرشادات السلامة المهمة الواردة في هذا الدليل جميع الظروف والمواقف المحتمل حدوثها. لذا، يقع على عاتقك مسئولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الجهاز وصيانته وتشغيله.
- ونظرًا لأن إرشادات التشغيل التالية تنطبق على طُرز متعددة، فإن خصائص الميكروويف التي تستعمله قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو استفسارات، اتصل بأقرب مركز خدمة أو انتقل مباشرة إلى الموقع www.samsung.com للحصول على التعليمات أو المعلومات.
- يُستخدم هذا الميكروويف بغرض تسخين الطعام، ويقتصر على الاستخدام المنزلي فقط. لا تقم بتسخين أي نوع من الأقمشة أو الوسائد المحببة حتى لا تحترق أو تؤدي إلى نشوب حريق. ولن تتحمل الشركة المصنّعة أية أضرار ناجمة عن الاستخدام الخاطئ للجهاز.
- قد يؤدي الإهمال في تنظيف الفرن إلى تدهور حالة سطحه مما قد يؤثر بشكل سلبي على الجهاز وقد ينتج عن ذلك خطورة عند الاستخدام.

الرجاء التخلص من مواد التغليف الخاصة بهذا المنتج أو إعادة استخدامها بالأسلوب المتبع بيئياً.
الرجاء الاتصال بالهيئات المحلية الخاصة بك للاستفسار عن كيفية التخلص من هذا المنتج بأمان وبما لا يضر البيئة.
يتوافق المنتج والسلك الخاص به مع معيار درجة الحرارة الاستوائية SASO/IEC.
ويتمثل الاختلاف الوحيد في متطلبات الرفع والمقطع العرضي ولا يؤثر ذلك على السلامة. في حين أنه لا يفضل من الناحية العملية تغيير سلك الكهرباء نظرًا لصغر حجم الحيز المخصص للسلك مثلاً.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 11 2014-07-03 2:34:00

ميزات الفرن

الفرن

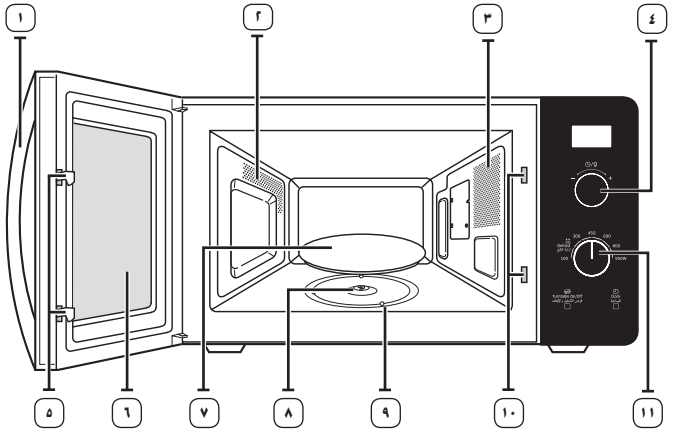

١. مقبض الباب
٢. فتحات التهوية
٣. الإضاءة
٤. قرص الوقت/الوزن
٥. قفلا الباب
٦. الباب
٧. الصينية الدوارة
٨. أداة التدوير
٩. الحلقة الدوارة
١٠. فتحتا قفل الأمان
١١. قرص التحكم في درجة حرارة الطهي المتغيرة

لوحة التحكم

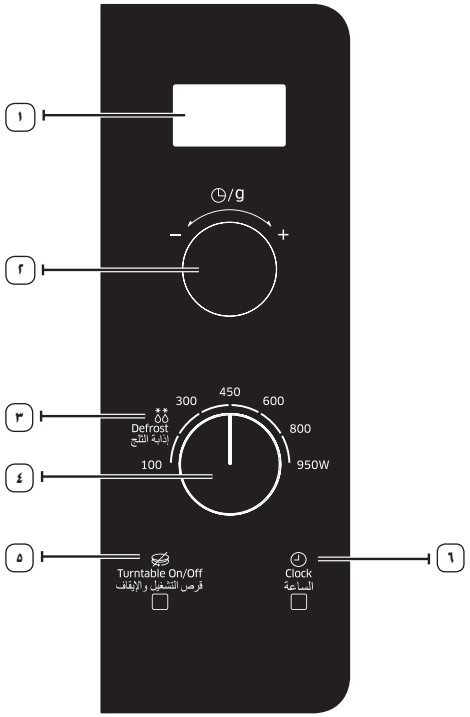

١. شاشة العرض
٢. قرص الوقت/الوزن
٣. إذابة الثلج
٤. قرص التحكم في درجة حرارة الطهي المتغيرة
٥. الزر قرص التشغيل والإيقاف
٦. زر ضبط الساعة

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 12 2014-07-03 2:34:01

الأدوات الإضافية

نوفر لك العديد من الأدوات الإضافية التي يمكنك استخدامها بطرق متعددة وفقًا للطراز الذي قمت بشرائه.

	١. **الحلقة الدوارة**. يتم وضعها في وسط الفرن. **الغرض :** تعمل الحلقة الدوارة على تدوير الصينية الدوارة.
	٢. **القرص الدوار**. يتم وضعه على الحلقة الدوارة مع وضع مركزه على أداة التدوير. **الغرض :** تعتبر الصينية الدوارة السطح الأساسي للطهي. ويمكن إخراجها بسهولة للتنظيف.
	٣. **جهاز الطهي بالبخار**، راجع الصفحتين ١٦ و١٧. **الغرض:** يستخدم جهاز الطهي بالبخار البلاستيكي عند استخدام وظيفة الطهي بالبخار.

يحظر تشغيل فرن الميكروويف دون الحلقة الدوارة والصينية الدوارة.

استخدام الفرن

طريقة عمل فرن الميكروويف

إن أشعة الميكروويف عبارة عن موجات كهرومغناطيسية عالية التردد. تعمل الطاقة المنبعثة منها على طهي الطعام أو إعادة تسخينه دون التأثير على شكله أو لونه.

يمكنك استخدام فرن الميكروويف فيما يلي:

- فك التجميد
- التسخين
- الطهي

عملية الطهي.



١. يتم توزيع أشعة الميكروويف التي تتولد بواسطة الماجنترون بشكل متساو أثناء دوران الطعام على الصينية الدوارة. وبذلك يتم طهي الطعام بدرجة متساوية.

٢. يمتص الطعام موجات الميكروويف حتى عمق بوصة واحدة تقريبًا (٢,٥ سم). ثم تستمر عملية الطهي باستمرار بينما تنتقل الحرارة خلال الطعام.

٣. تختلف فترات طهي الطعام تبعًا لنوع الإناء المستخدم وخصائص الطعام:
- الكمية والكثافة
- كمية الماء التي يحتوي عليها
- درجة الحرارة الأولية (مجمد أم لا)

يستمر طهي الطعام حتى في حالة إخراج الطعام من الفرن. لأن الأجزاء الداخلية من الطعام يتم طهيها بواسطة التوزيع الحراري. لذلك يجب مراعاة أوقات الانتظار المحددة في وصفات الطهي وفي هذا الكتيب لضمان:

- طهي الطعام بشكل متساو حتى الجزء الداخلي منه.
- تعرض الطعام بالكامل لنفس درجة الحرارة.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 13 2014-07-03 2:34:01

التأكد من أن الفرن يعمل بشكل صحيح

يتيح لك الإجراء البسيط التالي التأكد من أن الفرن يعمل بشكل صحيح طول الوقت. إذا ساورتك الشكوك، فراجع القسم الذي يحمل العنوان "استكشاف المشاكل وإصلاحها" في صفحة ٢٠.

يجب توصيل الفرن بمقبس حائط مناسب. يجب أن تكون الصينية الدوارة في موضعها بالفرن. في حالة استخدام مستوى طاقة غير الحد الأقصى (١٠٠ ٪ - ٩٥٠ واط)، يستغرق الماء وقتًا أطول حتى يصل إلى مرحلة الغليان.

افتح باب الفرن بواسطة جذب المقبض الموجود إلى يمين باب الفرن.
ضع كوبًا من الماء على الصينية الدوارة. أغلق الباب.

	١. اضبط مستوى الطاقة على أقصى مستوى عن طريق لف قرص **التحكم في درجة حرارة الطهي**.
	٢. قم بضبط الوقت ما بين ٤ إلى ٥ دقائق عن طريق لف قرص **الوقت/الوزن**. **النتيجة:** يضئ مصباح الفرن وتبدأ الصينية الدوارة في الدوران. ١) تبدأ عملية الطهي. وعند انتهائها يُصدر الفرن صوت تنبيه ٤ مرات. ٢) يصدر مؤشر تذكير الانتهاء صوت تنبيه ثلاث مرات (مرة كل دقيقة). ٣) يتم عرض الوقت الحالي مرة أخرى.

يجب توصيل الفرن بمقبس حائط مناسب.
يجب أن يكون القرص الدوار في موضعه بالفرن.
إذا تم استخدام مستوى طاقة غير الحد الأقصى، فإن المياه تستغرق وقتًا أطول للغليان.

ضبط الوقت

يحتوي فرن الميكروويف على ساعة مضمّنة. عند الإمداد بالكهرباء يتم عرض الأرقام "88:88" أو "12:00" أوتوماتيكيًا على الشاشة.

يرجى ضبط الوقت الحالي. يمكن عرض الوقت بتنسيق ٢٤ ساعة أو ١٢ ساعة.
يجب ضبط الساعة:

- عند تركيب فرن الميكروويف للمرة الأولى
- بعد انقطاع التيار الكهربائي

لا تنسى إعادة ضبط الساعة عند التبديل من أو إلى التوقيت الصيفي أو الشتوي.

وظيفة توفير الطاقة التلقائية

إذا لم تحدد أي وظيفة عندما يكون الجهاز في منتصف إعداد أو عملية تشغيل مع حالة التوقف المؤقت. يتم إلغاء الوظيفة ويظهر مؤشر "الساعة" بعد مرور ٢٥ دقيقة.
يتم إيقاف تشغيل مصباح الفرن بعد مرور ٥ دقائق في حالة فتح الباب.

	١. **لعرض الوقت بالتنسيق**. تنسيق ٢٤ ساعة. تنسيق ١٢ ساعة. اضغط الزر **Clock (الساعة)** مرة أو مرتين.
	٢. قم بلف قرص **الوقت/الوزن** لضبط الساعة.
	٣. اضغط على الزر **Clock (الساعة)**.
	٤. قم بلف قرص **الوقت/الوزن** لضبط الدقائق.
	٥. اضغط على الزر **Clock (الساعة)**.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 14 2014-07-03 2:34:02

الطهي/التسخين

يوضح الإجراء التالي كيفية طهي الطعام أو إعادة تسخينه.

تأكد "دومًا" من إعدادات الطهي قبل ترك الفرن دون ملاحظة.

افتح الباب. ضع الطعام في منتصف الصينية الدوارة. أغلق الباب. يحظر تشغيل فرن الميكروويف عندما يكون فارغًا.

	١. حدد مستوى الطاقة إلى أقصى مستوى عن طريق لف قرص **التحكم في درجة حرارة الطهي**. **(الحد الأقصى للطاقة: ٩٥٠ واط)**
	٢. يمكنك ضبط الوقت عن طريق لف قرص **الوزن/القرص**. **النتيجة:** يضيء مصباح الفرن وتبدأ الصينية الدوارة في الدوران. ١) تبدأ عملية الطهي. وعند انتهائها يُصدر الفرن صوت تنبيه ٤ مرات. ٢) يصدر مؤشر تذكير الانتهاء صوت تنبيه ٣ مرات (مرة كل دقيقة). ٣) يتم عرض الوقت الحالي مرة أخرى.

اختلاف مستويات الطاقة والوقت

تمكنك ميزة مستويات الطاقة من تحديد حجم الطاقة اللازمة والوقت المطلوب لطهي الطعام وذلك طبقًا لنوعية الطعام وكميته. يمكن الاختيار من ستة مستويات للطاقة.

مستوى الطاقة	مقدار الطاقة
عالي	٩٥٠ واط
تسخين	٨٠٠ واط
عالي متوسط	٦٠٠ واط
متوسط	٤٥٠ واط
منخفض متوسط	٣٠٠ واط
فك التجميد	١٨٠ واط
منخفضة / الاحتفاظ بالطعام دافئاً	١٠٠ واط

تتوافق أوقات الطهي المعطاة في وصفات الطعام وفي هذا الكتيب مع مستويات الطاقة المحددة المشار إليها.

عند تحديد...	يجب أن يكون وقت الطهي اللازم...
مستوى طاقة أعلى	أقل
مستوى طاقة أقل	أكثر

ضبط مدة الطهي

اضبط الوقت المتبقي للطهي بواسطة تدوير مقبض **الوقت/الوزن**.

أثناء الطهي، لزيادة وقت الطهي أو تقليله، قم بلف "مفتاح القرص" إلى اليمين أو إلى اليسار.

إيقاف عملية الطهي

يمكنك إيقاف عملية الطهي في أي وقت وذلك حتى يمكنك:

- التحقق من مدى نضج الطعام
- قلب الطعام أو تقليبه حسب الحاجة
- اترك الطعام لفترة من الوقت

لإيقاف الطهي...	عندئذ...
مؤقت	مؤقت : افتح الباب. **النتيجة:** توقف عملية الطهي. لمتابعة عملية الطهي، أغلق الباب مرة أخرى، وابدأ التشغيل تلقائيًا.
كامل	كامل: قم بلف قرص **الوقت/الوزن** يسارًا حتى يصدر صوت تنبيه. **النتيجة:** تتوقف عملية الطهي.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 15 2014-07-03 2:34:02

استخدام ميزة فك التجميد التلقائي

تُمكنك ميزة فك التجميد التلقائي من فك تجميد اللحوم والدواجن والأسماك.

ضع الطعام المجمد أولاً في وسط الصينية الدوارة وأغلق الباب.

استخدم فقط الأواني المسموح باستخدامها مع الميكروويف.

	١. قم بلف قرص **التحكم في درجة حرارة الطهي** إلى رمز **Defrost (إذابة الثلج)**.
	٢. قم بلف قرص **الوقت/الوزن** لتحديد الوزن المناسب. **النتيجة:** يضئ مصباح الفرن وتبدأ الصينية الدوارة في الدوران. ١) تبدأ عملية الطهي. وعند انتهائها يُصدر الفرن صوت تنبيه ٤ مرات. ٢) يصدر مؤشر تذكير الانتهاء صوت تنبيه ٣ مرات (مرة كل دقيقة). ٣) يتم عرض الوقت الحالي مرة أخرى.

يبين الجدول التالي برامج **إذابة الثلج السريع** المتعددة والكميات التي يمكن فك تجميدها والإرشادات المناسبة. قم بإزالة كافة أنواع التغليف قبل بدء فك التجميد.

ضع اللحوم والدواجن والأسماك على طبق زجاجي مسطح أو على طبق خزفي. وقم بترتيب الخبز والكيك على ورق المطبخ.

الكود/الطعام	حجم الوجبة	الإرشادات
1 اللحوم	٢٠٠ إلى ١٥٠٠ جم	قم بحماية الحواف بورق الألمونيوم. ثم قلّب اللحوم عندما يُصدر الفرن صوت تنبيه. يتناسب هذا البرنامج مع اللحم البقري ولحم الضأن وشرائح الستيك وقطع اللحم واللحم المفروم. اتركها لمدة من ٢٠ إلى ٩٠ دقيقة.
2 الدواجن	٢٠٠ إلى ١٥٠٠ جم	قم بحماية أطراف الأرجل والأجنحة باستخدام ورق الألمونيوم. ثم قلّب الدواجن. عندما يُصدر الفرن صوت تنبيه. يناسب هذا البرنامج الدجاجة الكاملة أو أجزاء الدجاج. اتركها لمدة من ٢٠ إلى ٩٠ دقيقة.
3 السمك	٢٠٠ إلى ١٥٠٠ جم	قم بتغليف ذيل السمكة باستخدام ورق الألمونيوم. ثم قلّب الأسماك عندما يُصدر الفرن صوت تنبيه. يناسب هذا البرنامج الأسماك الكاملة وشرائح السمك الفيليه. اتركها لمدة من ٢٠ إلى ٨٠ دقيقة.

دليل الطهي بالبخار

تعتمد "وحدة الطهي بالبخار" على فكرة الطهي بالبخار، وقد تم تصميمها لتوفير طهي سريع وصحي عند الطهي باستخدام فرن الميكروويف من Samsung.

وتعد هذه الأداة مثالية لطهي الأرز والمعجنات والخضراوات، وما إلى ذلك في وقت قياسي، مع الاحتفاظ بالقيمة الغذائية للأصناف.

تتكون مجموعة "وحدة الطهي بالبخار" من ٣ أجزاء:



غطاء صينية إدخال وعاء

تتحمل كافة الأجزاء درجات الحرارة من ٢٠- إلى ١٤٠ درجة مئوية.

تتميز هذه الأجزاء بأنها ملائمة للتخزين في المجمّد. كما يمكن استخدام كل منها بشكل منفصل أو استخدامها معًا.

تعليمات الاستخدام:

يحظر الاستخدام عند:

- لطهي الأطعمة التي تحتوي على نسبة عالية من السكر أو الدهون.
- مع الشواية أو عند لف جزء التسخين أو على درج التسخين.

يجب غسل كافة الأجزاء جيدًا بالماء والصابون قبل الاستخدام الأول.

لمعرفة أوقات عملية الطهي، يُرجى مراجعة التعليمات الموجودة في الجدول الموضح في الصفحة التالية.

الصيانة:

يمكن غسل أداة الطهي بالبخار في غسالة الأطباق.

عند غسلها يدويًا، استخدم الماء الساخن ومحلول التنظيف. لا تستخدم المواد الكاشطة في التنظيف.

قد تتسبب بعض الأطعمة (مثل الطماطم) في تغير لون البلاستيك. وهذا أمر طبيعي، وليس عيب في التصنيع.

فك التجميد:

ضع الأطعمة المجمدة في وعاء البخار بدون الغطاء. سيظل السائل في قاع الإناء ولن يؤثر على الطعام.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 16 2014-07-03 2:34:02

الطهي:

الطعام	حجم الوجبة	مستويات الطاقة	مدة الطهي (بالدقيقة)
الخرشوف	٣٠٠ جرام (قطعة إلى قطعتين)	٩٥٠ واط	٦-٥
	الإرشادات اغسل ثمار الخرشوف ونظفها بالماء. ثم ضع المصفاة داخل الوعاء. وثبت قطع الخرشوف داخل المصفاة. وقم بإضافة ملعقة واحدة كبيرة من عصير الليمون. وقم بوضع الغطاء. واتركها لمدة دقيقة إلى دقيقتين.		
خضراوات طازجة	٣٠٠ جم	٩٥٠ واط	٥-٤
	الإرشادات زن الخضروات (مثل. البروكلي والقرنبيط والجزر والفلفل) بعد غسلها وتنظيفها وتقطيعها إلى قطع متساوية. ثم ضع المصفاة داخل الوعاء. وقم بتوزيع الخضروات على الصينية. ثم قم بإضافة ٢ ملاعق كبيرة من الماء. وقم بوضع الغطاء. واتركها لمدة دقيقة إلى دقيقتين.		
الخضروات المجمدة	٣٠٠ جم	٦٠٠ واط	٨-٧
	الإرشادات ضع الخضروات المجمدة في طبق الطهي بالبخار. ثم ضع المصفاة داخل الوعاء. ثم قم بإضافة ملعقة واحدة كبيرة من الماء. وقم بوضع الغطاء. قم بتقليبه جيداً بعد الطهي وبعد وقت الانتظار. اتركه لمدة دقيقتين إلى ٣ دقائق.		
الأرز	٢٥٠ جم	٩٥٠ واط	١٨-١٥
	الإرشادات ضع الأرز في طبق الطهي بالبخار. أضف ٥٠٠ مل من الماء البارد. وقم بوضع الغطاء. بعد انتهاء الطهي اترك الأرز الأبيض لمدة ٥ دقائق والأرز البني لمدة ١٠ دقائق. اتركها لمدة ٥-١٠دقائق.		
البطاطس المحشوة	٥٠٠ جم	٩٥٠ واط	٨-٧
	الإرشادات زن البطاطس وقم بتنظيفها ثم ضعها في وعاء الطهي بالبخار. ثم قم بإضافة ٣ ملاعق كبيرة من الماء. وقم بوضع الغطاء. اتركه لمدة دقيقتين إلى ٣ دقائق.		
يخني (بارد)	٤٠٠ جم	٦٠٠ واط	٦-٥
	الإرشادات ضع اليخني في طبق الطهي البخار. وقم بوضع الغطاء. قلبه جيداً قبل الانتظار. واتركها لمدة دقيقة إلى دقيقتين.		

الطعام	حجم الوجبة	مستويات الطاقة	مدة الطهي (بالدقيقة)
حساء (بارد)	٤٠٠ جم	٩٥٠ واط	٤-٣
	الإرشادات صبه في طبق الطهي بالبخار. وقم بوضع الغطاء. قلبه جيداً قبل الانتظار. واتركها لمدة دقيقة إلى دقيقتين.		
الحساء المجمد	٤٠٠ جم	٩٥٠ واط	١٠-٨
	الإرشادات قم بوضع الحساء المجمَّد في وعاء الطهي بالبخار. وقم بوضع الغطاء. قلبه جيداً قبل الانتظار. اتركه لمدة دقيقتين إلى ٣ دقائق.		
قطع الخبز المجمدة المحشوة بالمربى	١٥٠ جم	٦٠٠ واط	٢-١
	الإرشادات بلل سطح العجائن المحشوة بالماء البارد. ضع قطعة واحدة أو اثنين من العجائن المجمدة بجوار بعضها داخل وعاء الطهي بالبخار. وقم بوضع الغطاء. اتركه لمدة دقيقتين إلى ٣ دقائق.		
خشاف الفواكه	٢٥٠ جم	٩٥٠ واط	٤-٣
	الإرشادات زن الفواكه الطازجة (مثل. التفاح والكمثرى والبرقوق والمشمش والمانجو والأناناس) بعد تقشيرها وغسلها وتقطيعها إلى قطع أو مكعبات متساوية. وضعها في وعاء الطهي بالبخار. أضف ملعقة إلى ملعقتين كبيرتين من الماء وملعقة إلى ملعقتين كبيرتين من السكر وضع الغطاء. اتركه لمدة دقيقتين إلى ٣ دقائق.		

طريقة استخدام أداة الطهي بالبخار

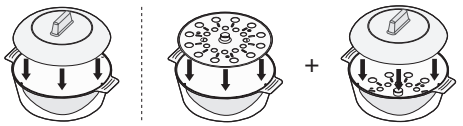

الوعاء وصينية الإدخال + الغطاء　　الوعاء + الغطاء

احتياطات:

- توخ الحذر عند فتح الغطاء الخاص بأداة الطهي بالبخار، لأن البخار المنبعث من الإناء يكون ساخنًا للغاية.
- استخدم قفازات الفرن عند إخراج الطعام بعد طهيه.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 17　　2014-07-03 2:34:02

استخدام وظيفة الإيقاف اليدوي للصينية الدوارة

يمكّنك الزر قرص **التشغيل والإيقاف** من استخدام الأطباق الكبيرة التي تملأ مساحة الفرن بالكامل. وذلك بإيقاف دوران القرص الدوار.

ستكون النتائج غير مرضية في هذه الحالة حيث ستكون درجة نضج الطعام غير متساوية. نوصي بلف الطبق يدويًا نصف دورة أثناء عملية الطهي.

تحذير ! لا تقم بتشغيل القرص الدوار أبداً دون وجود طعام في الفرن.

السبب: قد يتسبب ذلك في حدوث حريق أو تعرض الفرن للتلف.



١. اضغط على الزر **Turntable On/Off (قرص التشغيل والإيقاف)**. **النتيجة :** لن تدور الصينية الدوارة.	
٢. حتى يدور القرص الدوار مرة أخرى، اضغط على الزر **Turntable On/Off (قرص التشغيل والإيقاف)** مرة أخرى. **النتيجة:** ستدور الصينية الدوارة.	

لا تضغط على زر **Turntable On/Off (قرص التشغيل والإيقاف)** أثناء عملية الطهي.

دليل أواني الطهي

للطهي باستخدام فرن الميكروويف، يجب أن تتمكن أشعة الميكروويف من اختراق الطعام دون أن تنعكس على الأطباق أو تمتصها الأطباق المستخدمة.
لذا، يجب الحرص عند اختيار أدوات الطهي. إذا كان وعاء الطهي يحمل علامة مسموح باستخدامها مع الميكروويف، فلا داعي للقلق.
يسرد الجدول التالي الأنواع المختلفة لأدوات الطهي ويشير إلى ما إذا كان يمكن استخدامها في فرن الميكروويف أم لا وإلى كيفية استخدامها.

أوعية الطهي	مسموح باستخدامها مع الميكروويف	تعليقات
ورق الألمونيوم	✗ ✓	يمكن استخدامه بكميات صغيرة لحماية أسطح الأطعمة من النضج الزائد. قد يحدث ماس كهربائي إذا كان ورق الألمونيوم قريبًا جدًا من جدار الفرن أو إذا تم استخدام كميات كبيرة منه.
طبق التحمير	✓	لا يتم تسخينه مسبقًا لأكثر من ٨ دقائق.
الأواني الصينية والخزفية	✓	تكون الأواني الخزفية والأواني الفخارية والأواني الخزفية المطلية والأواني الصينية عادة مناسبة، ما لم تكن مزينة بزخارف معدنية.
الأطباق الكرتون المصنوعة من البوليستر التي تستخدم مرة واحدة	✓	يتم تغليف بعض الأطعمة المجمدة في هذه الأطباق.
تغليف الأطعمة السريعة		
• الأكواب المصنوعة من البولستير	✓	يمكن استخدامها في تدفئة الطعام. قد تتسبب الحرارة الزائدة في صهر الأدوات المصنوعة من الفوم.
• الأكياس الورقية أو الصحف	✗	قد تحترق.
• الورق المعاد تصنيعه أو الأدوات الزجاجية المزينة بزخارف معدنية	✗	قد يتسبب في حدوث ماس كهربائي.
الأدوات الزجاجية		
• من الفرن إلى أدوات المائدة	✓	يمكن استخدامها، ما لم تكن مزينة بزخارف معدنية.
• الأدوات الزجاجية الرقيقة	✓	يمكن استخدامها في تدفئة الأطعمة والسوائل. قد يتعرض الزجاج الرقيق للكسر أو الشرخ بسبب التسخين المفاجئ.
• البرطمانات الزجاجية	✓	يجب إزالة الغطاء، مناسب للتدفئة فقط.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 18 2014-07-03 2:34:02

أوعية الطهي	مسموح باستخدامها مع الميكروويف	تعليقات
المعادن		
• الأطباق	✗	قد تتسبب في حدوث ماس كهربائي أو نشوب حريق.
• أربطة أكياس الفريزر	✗	
الورق		
• الأطباق والأكواب ومناديل المائدة وورق المطبخ	✓	تستخدم في طهي الطعام الذي يستغرق فترات قصيرة وفي تدفئة الطعام. وتستخدم أيضًا لامتصاص الرطوبة الزائدة.
• الورق المعاد تصنيعه	✗	قد يتسبب في حدوث ماس كهربائي.
البلاستيك		
• الأواني	✓	خاصة إذا كانت مقاومة للحرارة. قد يحدث التواء لبعض أنواع البلاستيك الأخرى أو يتغير لونها عند درجات الحرارة المرتفعة. لا تستخدم البلاستيك المصنوع من الميلامين.
• الورق الحراري	✓	يمكن استخدامه للاحتفاظ بالرطوبة. لا يجب أن يلامس الطعام. توخ الحذر عند إزالة طبقة الورق الحراري حيث ينبعث بخار ساخن.
• أكياس الفريزر	✗ ✓	فقط إذا كانت تحتمل درجة الغليان أو إذا كانت صالحة للاستخدام في الفرن. لا يجب أن تكون محكمة الإغلاق. عند الضرورة، اثقبها بشوكة.
الورق الشمعي أو الدهني	✓	يمكن استخدامه للاحتفاظ بالرطوبة ومنع تناثر الطعام.

✓ : مستحسن ✗✓ : يستخدم بحذر ✗ : غير آمن

تلميحات ونصائح

إذابة الزبد
ضع ٥٠ جم من الزبد في طبق زجاجي عميق صغير. قم بتغطيته بغطاء بلاستيكي.
ثم قم بالتسخين لمدة من ٣٠ إلى ٤٠ ثانية باستخدام طاقة تبلغ ٩٠٠ واط حتى تتم إذابة الزبد.

إذابة الشوكولاتة
ضع ١٠٠ جم من الشوكولاتة في طبق زجاجي عميق صغير.
ثم قم بالتسخين لمدة من ٣ إلى ٥ دقائق. باستخدام طاقة تبلغ ٤٥٠ واط. حتى تتم إذابة الشوكولاتة.
قم بتقليب الشوكولاتة مرة أو مرتين أثناء الذوبان. استخدم قفازات الفرن أثناء إخراجها!

إذابة العسل المجمد
ضع ٢٠ جم من العسل المجمّد في طبق زجاجي عميق صغير.
قم بتسخينه لمدة من ٢٠ إلى ٣٠ ثانية باستخدام طاقة تبلغ ٣٠٠ واط. حتى تتم إذابة العسل.

إذابة الجيلاتين
ضع أوراق الجيلاتين الجافة (١٠ جم) لمدة ٥ دقائق في الماء البارد.
ضع الجيلاتين الذي تم تجفيفه في وعاء بايركس صغير.
قم بالتسخين لمدة دقيقة واحدة باستخدام طاقة تصل إلى ٣٠٠ واط. قم بالتقليب بعد الإذابة.

عمل الجيلي/الغطاء الثلجي (للكعك والجاتوه)
امزج الجيلي سريع التحضير (١٤ جم تقريبًا) مع ٤٠ جم من السكر و٢٥٠ مل من الماء البارد. ضعه في إناء بايركس دون غطاء لمدة ٣,٥ أو ٤,٥ دقيقة باستخدام طاقة تبلغ ٩٠٠ واط حتى يصبح لون الجيلي/الغطاء الثلجي شفافًا. قم بتقليبه مرتين أثناء الطهي.

صنع المربى
ضع ٦٠٠ جم من الفاكهة (على سبيل المثال توت مشكل) في وعاء زجاجي مناسب من البيركس له غطاء.
أضف ٣٠٠ جم من السكر وقم بالتقليب جيدًا.
قم بالطهي مع وضع الغطاء لمدة من ١٠ إلى ١٢ دقيقة باستخدام طاقة تبلغ ٩٠٠ واط.
ثم قم بالتقليب عدة مرات أثناء الطهي. قم بتفريغها في برطمانات مربى زجاجية صغيرة الحجم لها غطاء محكم. واتركها مغطاة لمدة ٥ دقائق.

إعداد البودنج
يقلب مسحوق البودنج مع السكر واللبن (٥٠٠ مل) مع اتباع تعليمات الشركات المصنعة والتقليب الجيد.
استخدم وعاء من البيركس بحجم مناسب له غطاء. وقم بتغطيته أثناء الطهي لمدة ٦,٥ إلى ٧,٥ دقيقة باستخدام طاقة تبلغ ٩٠٠ واط.
قم بالتقليب عدة مرات أثناء الطهي.

تحميص قطع اللوز
ضع ٣٠ جم من اللوز المقطع بالتساوي في طبق خزفي متوسط الحجم.
قم بتقليب قطع اللوز عدة مرات أثناء عملية التحميص لمدة ٣,٥ إلى ٤,٥ دقيقة باستخدام طاقة تبلغ ٦٠٠ واط.
اتركه في الفرن لمدة دقيقتين إلى ٣ دقائق. استخدم قفازات الفرن أثناء إخراجها!

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 19 2014-07-03 2:34:02

استكشاف المشكلات وحلها

إذا صادفت أي من المشكلات المذكورة أدناه حاول تنفيذ أي من الحلول المقدمة.

يعد ذلك أمرًا عاديًا.

- التكثيف داخل الفرن.
- وجود تيار هواء حول الباب والجسم الخارجي.
- انعكاس الضوء حول الباب والجسم الخارجي.
- انبعاث البخار من حول الباب والفتحات.

لا يبدأ تشغيل الفرن عند تحديد وقت التشغيل.

- هل الباب مغلق جيدًا؟

لم يتم طهي الطعام على الإطلاق.

- هل قمت بضبط المؤقت بشكل صحيح؟
- هل الباب مغلق؟
- هل قمت بزيادة الحمل على الدائرة الكهربائية مما تسبب في انقطاع سلك المنصهر أو فصل التيار الكهربائي؟

الطعام زائد النضج أو نيئ.

- هل تم تحديد المدة المناسبة لطهي هذا النوع من الطعام؟
- هل تم اختيار مستوى الطاقة المناسب؟

مصباح الضوء لا يعمل.

- ينبغي عدم استبدال مصباح الضوء بيديك لأسباب وقائية. يُرجى الاتصال بأقرب مركز خدمة عملاء معتمد من Samsung، لكي يرسلوا إليك مهندسًا محترفًا لاستبدال المصباح.

يتسبب الفرن في حدوث تشويش على أجهزة الراديو أو التلفزيون.

- قد يُلاحظ تشويش بسيط على أجهزة التلفزيون أو الراديو عند تشغيل الفرن. يُعد ذلك أمرًا عاديًا. لحل هذه المشكلة ضع الفرن بعيدًا عن أجهزة التلفزيون والراديو وأجهزة الاستقبال الهوائي.
- في حالة حدوث تشويش من جانب المعالج المصغر للفرن، قد يتم إعادة تعيين شاشة العرض. لحل هذه المشكلة، قم بفصل مأخذ التيار وإعادة توصيله مرة أخرى، أعد ضبط الوقت.

انبعاث شرارة وإصدار صوت فرقعة داخل الفرن (ماس كهربائي).

- هل تستخدم طبقًا به زخارف معدنية؟
- هل تركت شوكة أو أداة معدنية أخرى داخل الفرن؟
- هل ورق الألمونيوم قريب جداً من الجدران الداخلية؟

الدخان والروائح الكريهة عند التشغيل الأولي.

- إنها حالة مؤقتة نتيجة تسخين المكون الجديد. سيختفي الدخان والروائح تمامًا بعد التشغيل لمدة ١٠ دقائق.

لإزالة الروائح بسرعة أكبر، يرجى تشغيل فرن الميكروويف مع وضع تشكيلة ليمون أو عصير ليمون في الخزانة.

إذا لم تساعدك الإرشادات السابقة في حل المشكلة، فاتصل بأقرب مركز خدمة عملاء تابع لشركة SAMSUNG.

برجاء قراءة المعلومات الآتية:

- طراز الفرن ورقم التسلسل الخاص به، عادةً ما يكون مطبوعاً على الجزء الخلفي من الفرن
- التفاصيل الخاصة بالضمان
- جهز شرحًا واضحًا للمشكلة

اتصل بالبائع المحلي أو بخدمة ما بعد البيع لمنتجات SAMSUNG.

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 20 2014-07-03 2:34:02

المواصفات الفنية

تسعى شركة SAMSUNG جاهدة إلى تحسين جودة منتجاتها باستمرار. لذا، تخضع مواصفات التصميم وإرشادات المستخدم للتغيير دون إشعار مسبق.

الطراز	MS32F303EFW
مصدر التيار الكهربي	٢٢٠ فولت ~ ٥٠ / ٦٠ هرتز
استهلاك الطاقة الميكروويف	 ١٥٠٠ واط
الطاقة الناتجة	١٠٠ واط / ٩٥٠ واط (IEC-705)
تردد التشغيل	٢٤٥٠ ميجاهرتز
الماجنترون	OMP75P(31)
طريقة التبريد	محرك مروحة التبريد
الأبعاد (العرض × الارتفاع × العمق) من الخارج تجويف الفرن	 ٥١٨ × ٤٢٥ × ٢٩٧ مم ٣٥٧ × ٣٥٧ × ٢٥٥ مم
الحجم	٣٢ لترًا
الوزن الصافي	 ١٤,٥ كيلو جرام تقريبًا

مذكرة

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 21 2014-07-03 2:34:03

هل هناك أسئلة أو تعليقات؟

البلد	اتصل	أو قم بزيارة مواقعنا على الإنترنت
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG(726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
GHANA	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	www.samsung.com/africa_fr/support
SENEGAL	800-00-0077	
CAMEROON	7095-0077	
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

DE68-04272A-00

MS32F303EFW_ZA_DE68-04272A-00_AR.indd 22 2014-07-03 2:34:03

MS32F303EFW

Microwave Oven

Owner's instructions & Cooking guide

imagine the possibilities

Thank you for purchasing this Samsung product.

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

Planet First **100 % Recycled Paper**

This manual is made with 100 % recycled paper.

SAMSUNG

contents

Safety information 2
Quick look-up guide 11
Oven features 12
Oven 12
Control panel 12
Accessories 13
Oven use 13
How a microwave oven works 13
Checking that your oven is operating correctly 14
Setting the time 14
Cooking/Reheating 15
Power levels and time variations 15
Adjusting the cooking time 15
Stopping the cooking 15
Using the auto defrost features 16
Power steam cooking guide 16
Using the manual stop turntable function 18
Cookware guide 18
Troubleshooting 20
Technical specifications 21

safety information

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contains valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS

WARNING — Hazards or unsafe practices that may result in **severe personal injury or death**.

CAUTION — Hazards or unsafe practices that may result in **minor personal injury or property damage**.

- Warning; Fire hazard
- Warning; Hot surface
- Warning; Electricity
- Warning; Explosive material
- Do NOT attempt.
- Do NOT touch.
- Do NOT disassemble.
- Follow directions explicitly.
- Unplug the power plug from the wall socket.
- Make sure the machine is grounded to prevent electric shock.
- Call the service center for help.
- Note
- Important

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 2 2014-07-03 2:33:03

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

⚠ WARNING (Microwave function only)
WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
This appliance is intended to be used in household only.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
Only use utensils that are suitable for use in microwave ovens.
When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 3 2014-07-03 2:33:03

★	The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
⇄	If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
★	**WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
★	**WARNING:** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
⃠	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
★	The oven should be cleaned regularly and any food deposits removed.

☛	Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
⃠	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
★	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
★	Children should be supervised to ensure that they do not play with the appliance.
✆	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
⃠	**WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode;

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 4 2014-07-03 2:33:03

	The appliance should not be cleaned with a water jet.
	This oven should be positioned proper direction and height permitting easy access to cavity and control area.
	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
	If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
	The microwave oven has to be positioned so that plug is accessible.
	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING (Oven function only) - Optional	
	WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
	WARNING: Accessible parts may become hot during use. Young children should be kept away.
	A steam cleaner is not to be used.
	WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
	WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
	The temperature of accessible surfaces may be high when the appliance is operating.
	The door or the outer surface may get hot when the appliance is operating.
	Keep the appliance and its cord out of reach of children less than 8 years.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 5 2014-07-03 2:33:03

★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
⃠	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
⃠	Appliances are not intended to be operated by means of an external timer or separate remote-control system.

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safety bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

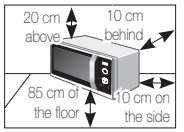

2. Remove all packing materials inside the oven.

3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)

4. This microwave oven has to be positioned so that plug is accessible.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
For your personal safety, plug the cable into a proper AC earthed socket.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 6 2014-07-03 2:33:04

- Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings (Turntable type model only)

- **ALWAYS** ensure that the door seals are clean and the door closes properly.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

- **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:
  - Accumulate
  - Prevent the door from closing correctly
- **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 7 2014-07-03 2:33:04

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45° and clean it. (Swing heater model only)



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.
The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair.

- **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:
  - Unplug it from the wall socket
  - Contact the nearest after-sales service centre

- If you wish to store your oven away temporarily, choose a dry, dustfree place. **Reason :** Dust and damp may adversely affect the working parts in the oven.
- This microwave oven is not intended for commercial use.
- The Light bulb should not be replaced in person for safety reasons.
  Please contact nearest authorised Samsung customer care centre to arrange for a qualified engineer to replace the bulb.

⚠ WARNING					
	Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
	Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
	For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
	Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
	This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
	Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 8 2014-07-03 2:33:04

	Do not pull or excessively bend or place heavy objecton the power cord.	✓	✓	✓	✓
	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
	Do not touch the power plug with wet hands.	✓	✓	✓	✓
	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
	Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
	Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
	Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓

	Do not pour or directly spray water onto the oven.	✓	✓		
	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: • Immerse the scalded area in cold water for at least 10 minutes. • Cover with a clean, dry dressing. • Do not apply any creams, oils or lotions.	✓	✓	✓	✓
	Do not put the tray or rack in water shortly after cooking because it may cause breakage or damage of the tray or rack.				✓
	Do not operate the microwave oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of the hot liquid.	✓			✓

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 9 2014-07-03 2:33:06

⚠ CAUTION					
★	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
⃠	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
★	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
⃠	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
⃠	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts inshells, tomatoes etc.			✓	✓
⃠	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
★	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
★	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
⃠	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
★	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
★	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.(MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:

(1) door (bent)

(2) door hinges (broken or loose)

(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 10 2014-07-03 2:33:07

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

(a) A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel.

(b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.
Please contact your local authorities in regard to the environmentally safe disposal of this product.
Product and its cord in compliance with SASO/IEC tropical temp.
Rise requirements, and, cross section is the only discrepancy, and it won't affect safety, meanwhile, it is not practical to change the power cord, e.g. too small chamber.

quick look-up guide

I want to cook some food.



1. Place the food in the oven.
   Select the power level by rotating the **COOKING POWER CONTROL** knob.



2. Select the cooking time by rotating the **TIME/WEIGHT** dial.
   Result: Cooking starts after about two seconds.

If you want to auto defrost some food.



1. Turn the **COOKING POWER CONTROL** knob to the **Defrost** symbol.



2. Turn the **TIME/WEIGHT** dial to select the appropriate weight.
   Result: Cooking starts after about two seconds.

If you want to adjust the cooking time.



Leave the food in the oven.
Turn the **TIME/WEIGHT** dial to the desired time.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 11 2014-07-03 2:33:08

OVEN

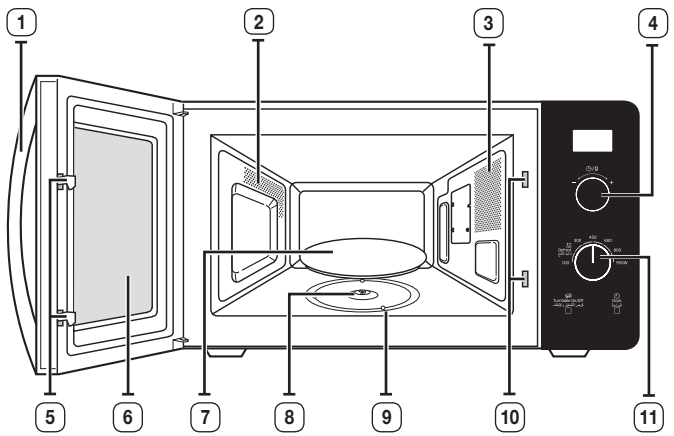

1. DOOR HANDLE
2. VENTILATION HOLES
3. LIGHT
4. TIME/WEIGHT DIAL
5. DOOR LATCHES
6. DOOR
7. TURNTABLE
8. COUPLER
9. ROLLER RING
10. SAFETY INTERLOCK HOLES
11. VARIABLE COOKING POWER CONTROL KNOB

CONTROL PANEL

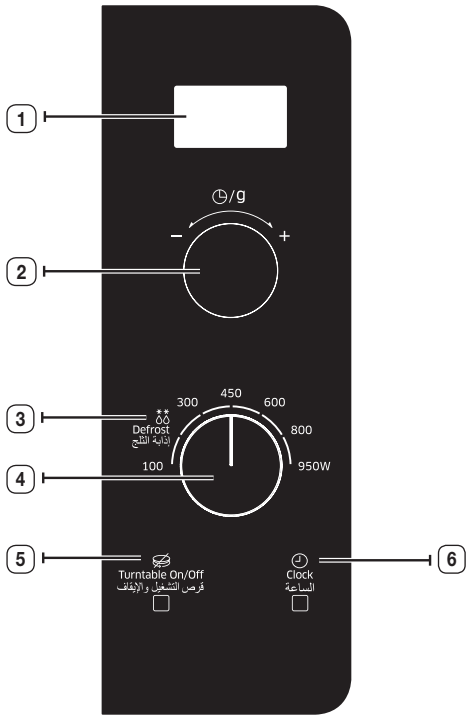

1. DISPLAY
2. TIME/WEIGHT DIAL
3. DEFROST
4. VARIABLE COOKING POWER CONTROL KNOB
5. TURNTABLE ON/OFF BUTTON
6. CLOCK SETTING BUTTON

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 12 2014-07-03 2:33:08

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	**1. Roller ring**, to be placed in the centre of the oven. **Purpose:** The roller ring supports the turntable.
	**2. Turntable**, to be placed on the roller ring with the centre fitting to the coupler. **Purpose:** The turntable serves as the main cooking surface; it can be easily removed for cleaning.
	**3. Steam cooker,** see page 16 to 17. **Purpose:** The plastic steam cooker when using power steam function.

DO NOT operate the microwave oven without the roller ring and turntable.

HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.
You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.

	**1.** The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
	2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
	3. Cooking times vary according to the container used and the properties of the food: • Quantity and density • Water content • Initial temperature (refrigerated or not)

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre
- The same temperature throughout the food.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 13 2014-07-03 2:33:08

CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled “Troubleshooting” on the page 20.

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 950 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the right side of the door.
Place a glass of water on the turntable. Close the door.

	**1.** Set the power level to maximum by turning **COOKING POWER CONTROL** knob.
	2. Set the time 4 to 5 minutes by turning the **TIME/WEIGHT** dial. **Result:** The oven light comes on and the turntable starts rotating. 1) Cooking starts and when it has finished the oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

The oven must be plugged into an appropriate wall socket.
The turntable must be in position in the oven.
If a power level other than the maximum is used, the water takes longer to boil.

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “88:88” and then “12:00” is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

Do not forget to reset the clock when you switch to and from summer and winter time.

Auto energy saving function
If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.
Oven Lamp will be turned off after 5 minutes with door open condition.

	1. To display the time in the.. 24-hour notation. 12-hour notation. Press the **Clock** button once or twice.
	2. Turn the **TIME/WEIGHT** dial to set hour.
	3. Press the **Clock** button.
	4. Turn the **TIME/WEIGHT** dial to set minute.
	5. Press the **Clock** button.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 14 2014-07-03 2:33:09

COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.



1. Set the power level to maximum by turning **COOKING POWER CONTROL** knob.
(MAXIMUM POWER : 950 W)



2. Set the time by turning **TIME/WEIGHT** dial.

Result: The oven light comes on and the turntable starts rotating.

1) Cooking starts and when it has finished the oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

POWER LEVELS AND TIME VARIATIONS

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between six power levels.

Power level	Output
HIGH	950 W
REHEAT	800 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST	180 W
LOW / KEEP WARM	100 W

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

ADJUSTING THE COOKING TIME

Adjust the remaining cooking time by rotating the **TIME/WEIGHT** dial.

During the cooking to increase or decrease the cooking time of you food, turn the dial right or left.

STOPPING THE COOKING

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Temporarily : Open the door. **Result:** Cooking stops. To resume cooking, close the door again and than automatically start.
Completely	Completely : Turn left the **TIME/WEIGHT** dial until beep. **Result:** Cooking stops.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 15 2014-07-03 2:33:09

USING THE AUTO DEFROST FEATURES

The auto defrost feature enables you to defrost meat, poultry, fish.

First, place the frozen food in the centre of the turntable and close the door.

Use only containers that are microwave-safe.



1. Turn the **COOKING POWER CONTROL** knob to the **Defrost** symbol.

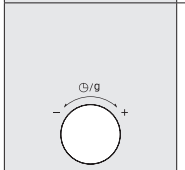

2. Turn the **TIME/WEIGHT** dial to select the appropriate weight.

Result: The oven light comes on and the turntable starts rotating.

1) Cooking starts and when it has finished the oven beeps 4 times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions. Remove all kind of package material before defrosting.
Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread and cake on kitchen paper.

Code/Food	Serving Size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 20-90 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-90 minutes.
3 Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-80 minutes.

POWER STEAM COOKING GUIDE

The Power Steamer is based on the principle of steam cooking, and is designed for fast, healthy cooking in your Samsung Microwave oven.
This accessory is ideal for cooking rice, pasta, vegetables, etc. in record time, while preserving their nutritional values.
The Microwave Power steamer set is made up of 3 items:



Bowl Insert tray Lid

All parts withstand temperatures from -20 °C to 140 °C.
Suitable for freezer storage. Can also be used separately or together.

CONDITIONS OF USE:

Do not use:
- to cook foods with a high sugar or fat content,
- with the grill or rotating heat function or on a hob.

Wash all parts well in soapy water before first use.

To find out cooking times, please refer to the instructions in the table on next page.

MAINTENANCE:

Your steamer can be washed in a dishwasher.

When washing by hand, use hot water and washing-up liquid. Do not use abrasive pads.

Some foods (such as tomato) may discolour the plastic. This is normal and not a manufacturing fault.

DEFROSTING:

Place the frozen food in the steam bowl without the lid. The liquid will remain in the bottom of the pot and will not harm the food.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 16 2014-07-03 2:33:09

COOKING:

Food	Serving Size	Power levels	Cooking time (min.)
Artichokes	300 g (1-2 pcs)	950 W	5-6
	Instructions Rinse and clean artichokes. Put tray into bowl. Set artichokes on tray. Add one tablespoon lemon juice. Cover with lid. Stand for 1-2 minutes.		
Fresh Vegetables	300 g	950 W	4-5
	Instructions Weigh the vegetables (e.g. broccoli, cauliflower, carrots, pepper) after washing, cleaning and cutting into similar size. Put tray into bowl. Distribute vegetables on tray. Add 2 tablespoons water. Cover with lid. Stand for 1-2 minutes.		
Frozen Vegetables	300 g	600 W	7-8
	Instructions Put the frozen vegetables into the steam bowl. Put tray into bowl. Add 1 tablespoon water. Cover with lid. Stir well after cooking and standing. Stand for 2-3 minutes.		
Rice	250 g	950 W	15-18
	Instructions Put rice into the steam bowl. Add 500 ml cold water. Cover with lid. After cooking let stand white rice 5 minutes, brown rice 10 minutes. Stand for 5-10 minutes.		
Jacket Potatoes	500 g	950 W	7-8
	Instructions Weigh and rinse the potatoes and put them into steam bowl. Add 3 tablespoons water. Cover with lid. Stand for 2-3 minutes.		
Stew (Chilled)	400 g	600 W	5-6
	Instructions Put stew into the steam bowl. Cover with lid. Stir well before standing. Stand for 1-2 minutes.		
Soup (Chilled)	400 g	950 W	3-4
	Instructions Pour into steam bowl. Cover with lid. Stir well before standing. Stand for 1-2 minutes.		
Frozen Soup	400 g	950 W	8-10
	Instructions Put frozen soup into steam bowl. Cover with lid. Stir well before standing. Stand for 2-3 minutes.		
Frozen Yeast Dumpling with Jam Filling	150 g	600 W	1-2
	Instructions Moist the top of filled dumplings with cold water. Put 1-2 frozen dumplings side by side into the steam bowl. Cover with lid. Stand for 2-3 minutes.		
Fruit Compote	250 g	950 W	3-4
	Instructions Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into steam bowl. Add 1-2 tablespoons water and 1-2 tbsp. sugar. Cover with lid. Stand for 2-3 minutes.		

Handling of power steam cooker

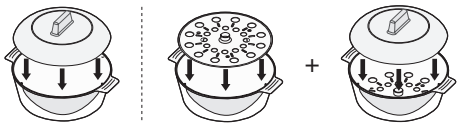

Bowl + Lid Bowl with insert tray + Lid

PRECAUTIONS:

- Take special care when opening the lid of your steamer, because the steam escaping may be very hot.
- Use oven gloves when handling after cooking.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 17 2014-07-03 2:33:09

USING THE MANUAL STOP TURNTABLE FUNCTION

The turntable on/off button enables you to use large dishes which fill the whole oven by stopping the turntable from rotating.

The results will be less satisfactory in this case as the cooking is less even. We recommend that you turn the dish by hand halfway through the cooking process.

Warning ! Never operate the turntable without food in the oven.

Reason: This may cause fire or damage to the unit.

1. Press the **Turntable On/Off** button.
   Result: Turntable will not rotate.
2. To switch the turntable rotating back on, press the **Turntable On/Off** button again.
   Result: Turntable will rotate.

Don't press **Turntable On/Off** button during cooking process.

cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.
Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 18 2014-07-03 2:33:10

Cookware	Microwave-safe	Comments
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ **: Recommended** ✓✗ **: Use caution** ✗ **: Unsafe**

TIPS AND TRICKS

MELTING BUTTER
Put 50 g butter into a small deep glass dish. Cover with plastic lid.
Heat for 30-40 seconds using 900 W, until butter is melted.

MELTING CHOCOLATE
Put 100 g chocolate into a small deep glass dish.
Heat for 3-5 minutes, using 450 W until chocolate is melted.
Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY
Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE
Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W. Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)
Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM
Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid.
Add 300 g preserving sugar and stir well.
Cook covered for 10-12 minutes using 900 W.
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids.
Stand on lid for 5 minutes.

COOKING PUDDING
Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W.
Stir several times well during cooking.

BROWNING ALMOND SLICES
Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 19 2014-07-03 2:33:10

troubleshooting

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you select operating time.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.
  To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.
Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 20 2014-07-03 2:33:10

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MS32F303EFW
Power source	220 V ~ 50 Hz / 60Hz
Power consumption Microwave	 1500 W
Output power	100 W / 950 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OMP75P (31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	 518 x 297 x 425 mm 357 x 255 x 357 mm
Volume	32 liter
Weight Net	 14.5 kg approx.

MEMO

MS32F303EFW_ZA_DE68-04272A-00_EN.indd 21 2014-07-03 2:33:10

QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG(726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
GHANA	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	www.samsung.com/africa_fr/support
SENEGAL	800-00-0077	
CAMEROON	7095-0077	
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

DE68-04272A-00